

NEW PRODUCT RELEASE

For Immediate Release
January 23, 2008

Contact: Applications Engineering

180° Curing With the New DYMAX UVCS SideCure™ Conveyor System

When the job calls for 180° curing, the new DYMAX UVCS SideCure™ conveyor system is the equipment you need! Designed for UV curing of DYMAX adhesives and coatings from the left, right, and/or top, the *SideCure* conveyor can be outfitted with up to eight DYMAX 5000-EC UV curing flood lamps. The conveyor's 12" wide belt and 7.5" vertical clearance, with 5" high side-curing capability, allows for the curing of large parts and makes the *SideCure* a very versatile UV curing solution. In addition, the relatively small conveyor size – 51" x 30" x 21.5" – minimizes the footprint required for UV curing. The use of the DYMAX SideCure conveyor system can often eliminate potential "shadowed areas" around components that are detrimental to a light curing process.

The high-intensity DYMAX 5000-EC lamps used with the UVCS *SideCure* conveyor provide 225 mW/cm² of intensity for fast UV curing as well as complete shielding from UV light and consistent exposure times. The *SideCure* conveyor can be outfitted with up to four 5000-EC lamps on top and up to four 5000-EC lamps on the sides. When 5000-EC lamps are configured in series, the conveyor belt speeds can often be doubled.

The *SideCure* conveyor system is ideal for bonding, masking, and coating applications in the medical, electronic, industrial, and aerospace industries where 180° UV curing is required.

DYMAX Corporation – 318 Industrial Lane - Torrington, CT 06790 - Phone: 860-482-1010 - Fax: 860-496-0608 - E-mail: info@dymax.com - www.dymax.com

DYMAX Europe GmbH - Trakehner Strasse 3 - D-60487 Frankfurt am Main - Germany - Phone: 0049-69-7165-3568 - Fax: 0049-69-7165-3830 - E-mail: dymaxinfo@dymax.de - www.dymax.de

DYMAX UV Adhesives & Equipment (Shenzhen) Ltd – Unit 807, Talfook Building, No. 9 Shi Hua Road, Futian Free Trade Zone, Shenzhen, China 518038
Phone: 86.755.83485759 - Fax: 86.755.83485760 - E-mail: simon_ang@dymax.com - www.dymax.com.cn

DYMAX Asia (HK) - Unit 1006, 10/F., Carnarvon Plaza, No. 20, Carnarvon Road, T.S.T., Kowloon, Hong Kong - Phone: 852-2460-7038 - Fax: 852-2460-7017 - E-mail: simon_ang@dymax.com - www.dymax.com.cn


DYMAX®, Light-Weld®, Light-Welder®, Multi-Cure®, Ultra Light-Weld®, MEDI-CURE®, MD® and SPEEDMASK® are registered trademarks of DYMAX Corporation

DYMAX Corporation is a technology-based company specializing in the formulation, manufacture and service of advanced assembly adhesives, coatings, epoxies, masking resins, and UV curing systems.

For more information, contact DYMAX Corp., 318 Industrial Lane, Torrington, CT 06790; Phone: 860-482-1010; Fax: 860-496-0608; Toll Free: 1-877-DYMAX-UV (1-877-396-2988); e-mail: info@dymax.com or visit our Web site at www.dymax.com.

CAPTION

DYMAX UVCS SideCure™ Conveyor System Shown with
Two Top-Mounted and Two Side-Mounted 5000-EC UV Curing Flood Lamps

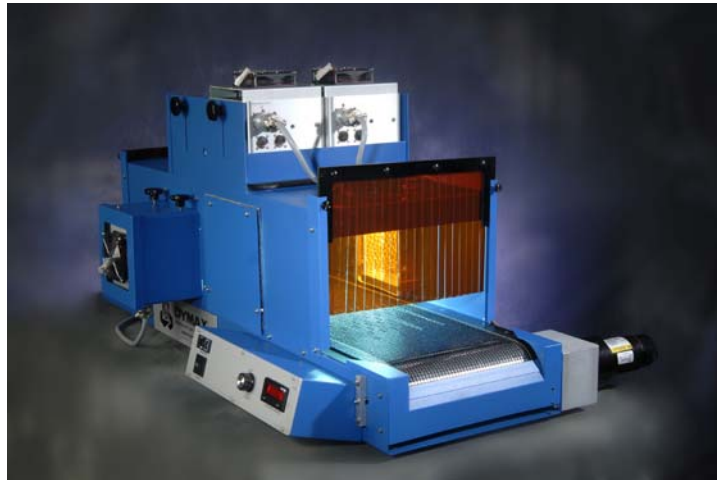

L:\PRESSRELEASES\2007\1P160

DYMAX Corporation – 318 Industrial Lane - Torrington, CT 06790 - Phone: 860-482-1010 - Fax: 860-496-0608 - E-mail: info@dymax.com - www.dymax.com

DYMAX Europe GmbH - Trakehner Strasse 3 - D-60487 Frankfurt am Main - Germany - Phone: 0049-69-7165-3568 - Fax: 0049-69-7165-3830 - E-mail: dymaxinfo@dymax.de - www.dymax.de

DYMAX UV Adhesives & Equipment (Shenzhen) Ltd – Unit 807, Talfook Building, No. 9 Shi Hua Road, Futian Free Trade Zone, Shenzhen, China 518038
Phone: 86.755.83485759 - Fax: 86.755.83485760 - E-mail: simon_ang@dymax.com - www.dymax.com.cn

DYMAX Asia (HK) - Unit 1006, 10/F., Carnarvon Plaza, No. 20, Carnarvon Road, T.S.T., Kowloon, Hong Kong - Phone: 852-2460-7038 - Fax: 852-2460-7017 - E-mail: simon_ang@dymax.com - www.dymax.com.cn

DYMAX®, Light-Weld®, Light-Welder®, Multi-Cure®, Ultra Light-Weld®, MEDI-CURE®, MD® and *SPEEDMASK*® are registered trademarks of DYMAX Corporation

